

Thank you for purchasing an AplianX IP Gateway


Your order contains:

- AplianX IP Gateway
- Power cable
- Quick start guide


Follow these steps to prepare the AplianX IP Gateway for use:

- Connect power cord to rear of chassis and plug into mains supply.


Rear panel view

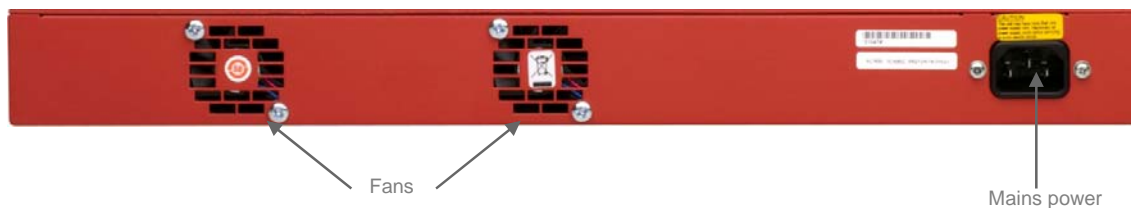

Front panel view

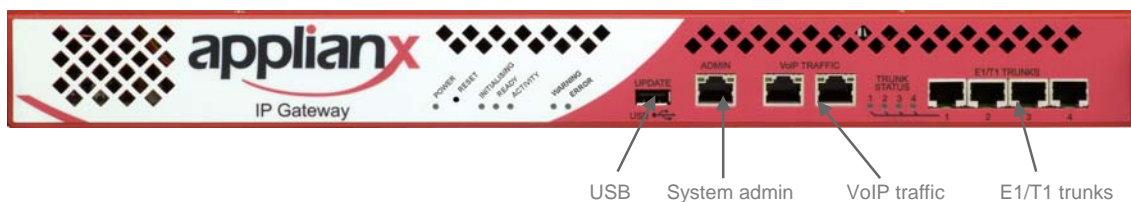

- Your AplianX IP Gateway will light all the LEDs, one at a time, until they are all lit and then they will go out. Next, the activity light will start to flash. When the activity light stops flashing, the gateway is ready to configure.

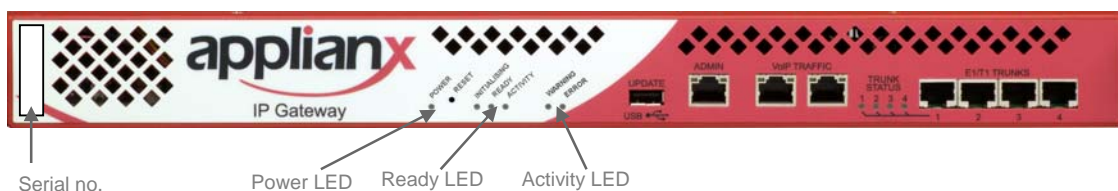

- AplianX IP Gateway configuration is carried out using a web browser. This can be achieved by connecting the auto sensing Ethernet port of the gateway directly to a PC. The gateway is shipped with a static IP address of 192.168.1.100 and a subnet mask of 255.255.255.0.
- Configure the PC with an IP address in the same subnet and open a web browser. To access the gateway either browse to 192.168.1.100 or to axNNNNNN where NNNNNN is the serial number of the AplianX IP Gateway. Alternatively, you can use the AplianX Search Tool to gain access.
- Once the AplianX IP Gateway is accessed you will be asked to set up an administration user name and password. You will then be taken through the configuration wizard. At the end of this wizard, you will be directed to the main configuration page, where you can activate your gateway. Once activated, the ready light will be illuminated.
- For more detailed instructions please see the AplianX IP Gateway user guide, which is available from: www.aplianx.com/technical-support